



A-A
adjustment of collimation optics
using eccentric key 60EX-4 ②

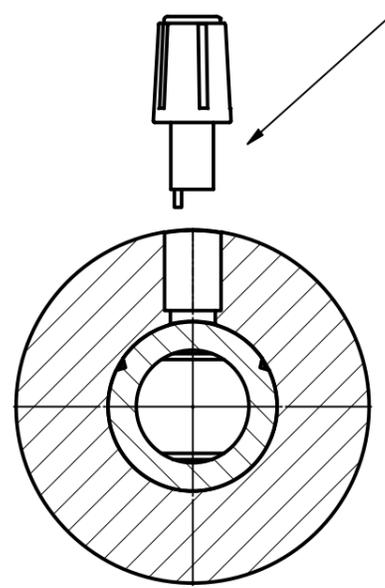


B-B
clamp screws
for locking optics position (2x120°)
using screw-driver size 1.2mm
9D-12 ①

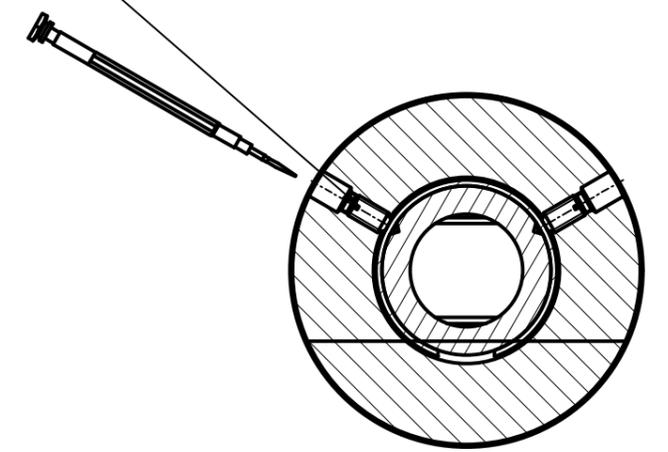

adjustment of collimation optics
using eccentric-key 60EX-4 ②

clamp screws for locking optics position (2x120°)
using screw-driver size 1.2mm
9D-12 ①


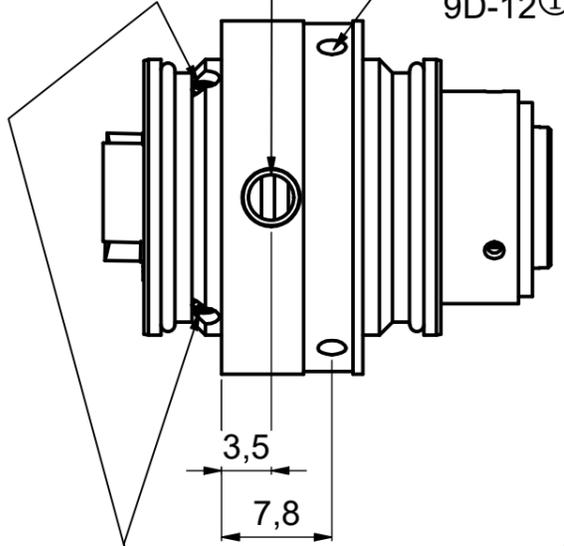


! Don't touch any other screws !

Tools for assembly
and adjustment

screw driver
size 1.2mm
9D-12

eccentric key
60EX-4

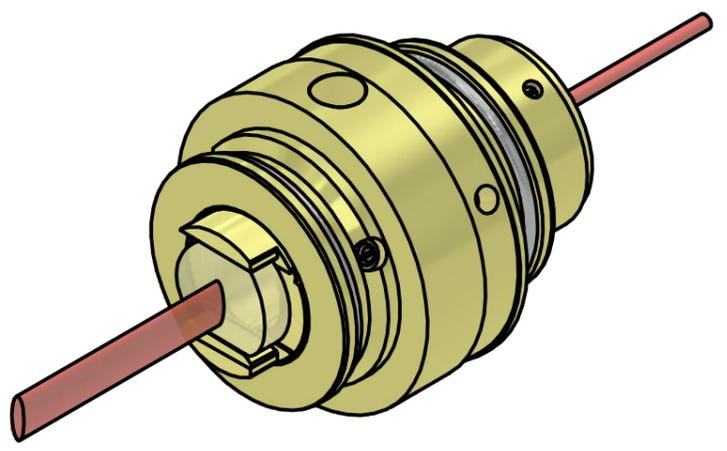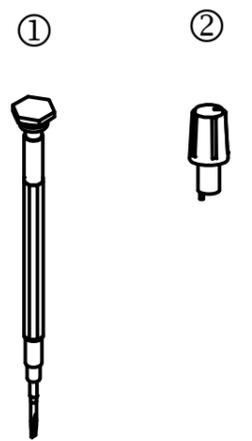

Dimensions DIN EN ISO 14405	Scale: 2:1		5AN-3-35
	Anamorphot 5AN-3-35		
	Date	Name	5AN-3-35, case type 2
	editor	11.12.2024 mb	Customer Drawing
	exam.		
	free		
Schäfter+Kirchhoff OPTICS, METROLOGY, AND PHOTONICS			9302-1039-0500
File: 930210390500.idw			Model: 930210390500.iam

Size:
A3
Page:
1